

ELIMINATOR AUTO CHANGEOVER END USER INSTRUCTIONS

NO MAINTANACE REQUIRED

OPERATION

(1) After installation simply turn on cylinder (or bank of cylinders) that you want to be used **FIRST**. (This side is now “locked in”)

(2) Turn on cylinder (or bank of cylinders) that you want to be used **SECOND**

The “ELIMINATOR” valve will automatically switch to the second Cylinder (or bank of cylinders) when the pressure in the first drops to Approximately 185 psi

As cylinders are exhausted simply replace them with full cylinders, and **TURN THEM ON**. No other action is needed; the “Eliminator” will switch from side to side as needed. When the “CYLINDER IN USE INDICATOR” is protruding on one side, and the gauge on the opposite side is in the low (shaded) area, it is time to change the cylinders on that side.

MANUAL SWITCHING

If for some reason you need to switch manually to the other cylinder or (bank of cylinders).

(1) Turn off the cylinder or (bank of cylinders) that you want to take out of service

(2) Bleed off the pressure on that side by slowly loosening the cylinder connector. The “Eliminator” will switch to the other side.

PUSHING or HITTING the indicator will get you NOWHERE!

QUESTIONS? CALL MICRO MATIC (866) 327-4159