


# RSV/RPV Closed Systems

## Fill Coupler - Maintenance Instructions


### Disassembly

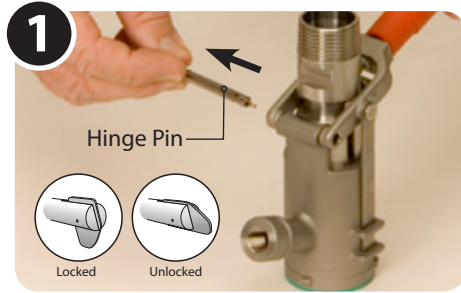


Unlock and remove hinge pin.



Pull handle assembly away from body.

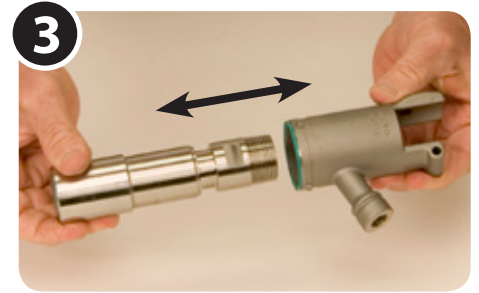

Pull the probe assembly and body apart.

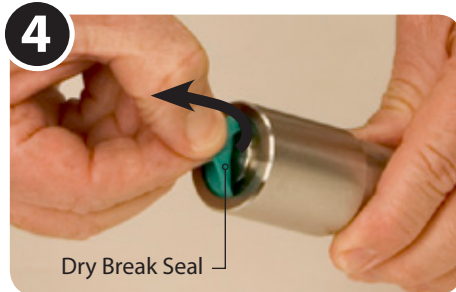

Remove dry break seal from probe.



Remove O-ring from inside body.



Remove main gasket from body.


# RSV/RPV Closed Systems

## Fill Coupler - Maintenance Instructions


### Assembly




RSV coupler and fill head replacement parts. Do not reuse old components. Clean body in soap or a solution that is compatible with the product to remove dirt and debris before assembly.

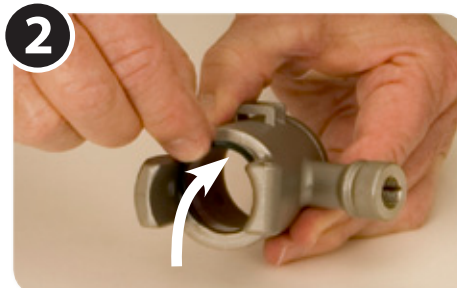

Install new O-ring seal into groove. **NOTE: Lightly lubricate O-ring prior to installing with silicone grease or a lubricant that is compatible with the product. Take care not to spread the lubricant on other components.**

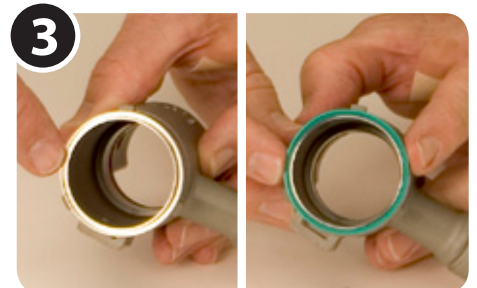

Clean foreign debris from groove before installing new main gasket in the groove on the body.

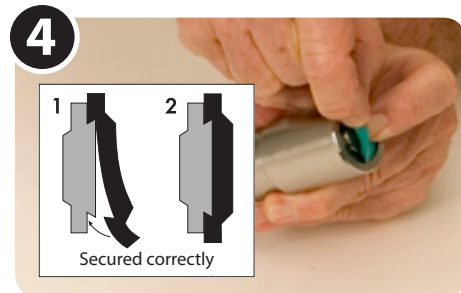


Replace dry break seal. **NOTE: Seal must be secured over groove for proper installation.**



Push probe assembly into body.



Reinstall handle assembly into body. Ensure that the locking arm is in the locking arm guide.

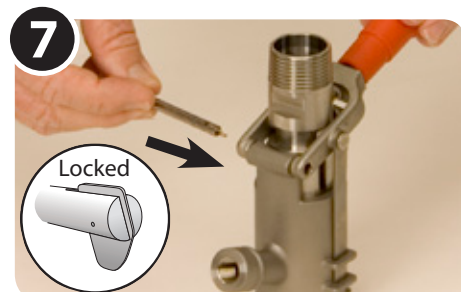

Replace the hinge pin. **NOTE: Lock hinge pin securely.**



Correctly assembled Fill Coupler